



2015 Audi Service

1 Maintenance Schedules (USA and Canada)

⇒ MY 2015 Maintenance Schedule (Gas and Hybrid Vehicles) - United States

⇒ MY 2015 Maintenance Schedule (Gas and Hybrid Vehicles) - Canada

1.1 MY 2015 Maintenance Schedule (Gas and Hybrid Vehicles) - United States

Note

The intervals shown in this table are based on vehicles operating under normal conditions. In case of severe conditions, such as extremely low temperatures, excessive dust, etc., it is necessary for certain operations to be carried out in between the given intervals. This applies particularly to engine oil changes and the cleaning or replacing of the air cleaner filter element.

Service Intervals in Miles	5K	15K	25K	35K	45K	55K	65K	75K
⇒ Standard Maintenance ¹⁾	X		X		X		X	
⇒ Major Maintenance ²⁾		X		X		X		X
⇒ Additional Maintenance Items								

✓ all completed items

1.1.1 Standard Maintenance

Labor Item	Vehicle Application
☐ AdBlue® Fluid - Fill completely with fresh fluid (24 liters max.) and adapt learned values for AdBlue tank under guided fault finding after filling fluid	Only all TDI models
☐ Brake System - Check for damage and leaks, thickness of pads, and brake fluid level.	All Vehicles
☐ Engine Oil/Oil Filter - Change oil and replace filter	All Vehicles
☐ On-board Diagnosis - Check	Flex fuel vehicles only
☐ Service Reminder Indicator Display - Reset display	All Vehicles
☐ Tires and Spare Wheel - Check for wear and damage. Check tire pressure. Reset Tire Pressure Monitoring System (TPMS)	All Vehicles
☐ Windshield Washer and Headlight Washing System - Add fluid if necessary. Check adjustment and function	All Vehicles
☐ Wiper Blades - Check condition and replace if necessary	All Vehicles
☐ See ⇒ Additional Maintenance Items	All Vehicles

Standard Maintenance Additional Item

Note

Additional item at 5,000 miles or 1 year after delivery, whichever occurs first.



Labor Item	Vehicle Application
☐ Tires - Rotate and reset TPMS	All except R8

1.1.2 Major Maintenance

Labor Item	Vehicle Application
☐ Automatic Transmission and Final Drive - Check for leaks	All Vehicles
☐ Battery - Small 12 volt side battery located in the trunk compartment on left side. Check for clean terminals (no corrosion), properly mounted housing and no damage; replace if necessary	Only Q5 hybrid
☐ Battery - Check for clean terminals (no corrosion), properly mounted housing and no damage; replace if necessary. Also, check the acid level of battery only if the level can be seen through the housing and fill if necessary	All except Q5 hybrid
☐ Cabriolet Front Latch – Lubricate	Only A3 Cabriolet, A5 Cabriolet, S5 Cabriolet
☐ Cooling System - Check coolant level and add coolant if necessary	All Vehicles
☐ Crash Active Headrest - Check function	Only A8
☐ Door Hinges and Straps- Lubricate	Only TT, TTS, R8 Coupe, R8 Spyder, Q7
☐ Drive Shafts - Check boots	All Vehicles
☐ Dust and Pollen Filter - Replace filter	All Vehicles
☐ Engine Compartment - Check for leaks	All Vehicles
☐ Exhaust system - Check for damage and leaks	All Vehicles
☐ Front and Rear Axle - Check for excessive play. Check dust seals on ball joints and tie rod ends	All Vehicles
☐ Hood Lid Hinges- Lubricate	Only TT, TTS, R8 Coupe, R8 Spyder,
☐ Horn - Check function	All Vehicles
☐ Lighting, Front - Check function of parking lights, low beams, high beams, fog lights, blinkers and hazard lights	All Vehicles
☐ Lighting, Rear - Check function of brake lights (including third brake light), tail lights, back-up lights, rear fog lights, license plate lights, blinkers and hazard lights	All Vehicles
☐ Manual Transmission and Final Drive - Check for leaks	All Vehicles
☐ Plenum Panel - Remove cover for plenum panel to check water drain and clean if necessary	All Models
☐ Ribbed V-belt and Tensioner - Check condition and replace if necessary	Only R8 coupe and R8 Spyder



Labor Item	Vehicle Application
☐ Road Test - Check engine performance, clutch, manual/automatic transmission, braking (including hand and foot brake), steering, wheels, wheel bearings, drive shaft, horn, hybrid vehicles (electric drive for operational readiness)	All Vehicles
☐ Roll-over protection: check function with soft top down	Only A5/S5 Cabriolet and R8 Spyder
☐ Snow Screen for Air Cleaner - Clean	Only A4, allroad®, S4, A5, S5, RS 5, Q5, SQ5, and Q5 hybrid
☐ Sunroof Systems (All) - Clean guide rails and lubricate with grease	All Vehicles
☐ Tire Repair Set - Check renewal date (where applicable)	All Vehicles
☐ Underbody - Check for damage and leaks	All Vehicles
☐ Visual Check - Check the chassis for possible paint damage and corrosion, from the inside and outside with the doors as well as hood and trunk lids open	All Vehicles
☐ See → Additional Maintenance Items	All Vehicles

1.1.3 Additional Maintenance Items

Labor Item	Interval	Vehicle Application
☐ AdBlue® Fluid - Replace only if AdBlue® has not been filled within the last 4 years	Every 4 years regardless of mileage	Only all TDI models
☐ Air Filter - Clean housing and replace filter	First 35,000 miles and thereafter every 40,000 miles	Only S6, S7, RS7, A8 3.0L V6 TDI, A8 3.0L V6 TFSI , *A8 4.0L V8 TFSI, and TTS * Note: The S8 4.0L V8 engine is not included in this interval.
☐ Air Filter - Clean housing and replace filter	First 55,000 miles and thereafter every 60,000 miles	Only S8 4.0L V8
☐ Air Filter - Clean housing and replace filter	First 55,000 miles and thereafter every 60,000 miles	Except RS5, TTS, S6, S7, RS7, A8 3.0L TFSI, A8 3.0L TDI, A8 4.0 TFSI * Note: This interval includes the S8 4.0L V8 TFSI engine.
☐ Air Filter - Clean housing and replace filter	First 15,000 miles and thereafter every 20,000 miles	Only RS 5
☐ AWD Clutch - Change oil (if equipped)	Every 3 years	A3 with AWD, Q3 with AWD TT, TTS
☐ Brake Discs - Check thickness	First at 35,000 miles or 4 years, whichever occurs first and thereafter, every 40,000 miles or 4 years, whichever occurs first	All Vehicles



Labor Item	Interval	Vehicle Application
☐ Brake and Clutch System, Changing Brake Fluid	Every 2 years regardless of mileage	All Vehicles
☐ Continuously Variable Transmission (multitronic™) - Change ATF	First 35,000 miles and thereafter every 40,000 miles	All Vehicles
☐ Diesel Particulate Filter (DPF) – Check ash loading according to manufacturer work procedure. *Replace if necessary	First 115,000 miles or 110,000 miles after a Diesel Particulate Filter (DPF) replacement	All TDI Vehicles * Note: If DPF replacement is not necessary, perform check every 20,000 miles (30,000 km) thereafter until replacement becomes necessary.
☐ Doors - Lubricate door hinges, straps, locks, and hood latch	First at 35,000 miles or 4 years, whichever occurs first and thereafter, every 40,000 miles or 4 years, whichever occurs first	All Vehicles
☐ S tronic Transmission - Change MTF oil for gearbox	First 15,000 miles and thereafter every 20,000 miles	Only RS 5
☐ S tronic Transmission - Change fluid and filter element for clutch hydraulics	First 35,000 miles and thereafter every 40,000 miles	Only A3, TT, TTS, S4, S5, S5 Cabriolet, RS5, S6, S7, and R8 Coupe, R8 Spyder
☐ Fuel Filter- Replace	First 15,000 miles and thereafter every 20,000 miles	All TDI models
☐ Interior Lights - Check all interior lights, glove box compartment illumination, control lights, and MMI (if applicable)	First at 35,000 miles or 4 years, whichever occurs first and thereafter, every 40,000 miles or 4 years, whichever occurs first	All Vehicles
☐ Power Steering Fluid - Check fluid level	First at 35,000 miles or 4 years, whichever occurs first and thereafter, every 40,000 miles or 4 years, whichever occurs first	Only Q7
☐ Rear Sport Differential - Change ATF for clutch hydraulics and differential oil	First 35,000 miles and thereafter every 40,000 miles	Only RS5 and RS7
☐ Ribbed V-belt - Replace only the belt for the compressor drive	First at 55,000 miles and thereafter every 60,000 miles	All vehicles with the 3.0L V6 TFSI
Ribbed V-belt - Check and replace if necessary. Check tension of belt drive with a manual tensioner and retention if necessary.	First at 75,000 miles and thereafter every 80,000 miles	All Vehicles



Labor Item	Interval	Vehicle Application
☐ Spark Plugs - Replace	First at 35,000 miles or 6 years, whichever occurs first and thereafter, every 40,000 miles or 6 years, whichever occurs first	Only 4.0L V8 TFSI, A8L W12, and *2.0L TFSI * Note: Excludes: Q3 and all 2.0L TFSI Flex Fuel engines
☐ Spark Plugs - Replace	First at 35,000 miles or 6 years, whichever occurs first and thereafter, every 30,000 miles or 6 years, whichever occurs first	Only 2.0L TFSI Flex Fuel engine
☐ Spark Plugs - Replace	First at 55,000 miles or 6 years, whichever occurs first and thereafter, every 60,000 miles or 6 years, whichever occurs first	Only A3 1.8 TFSI, Q3 2.0T, all vehicles with 3.0L V6 TFSI, 4.2L V8 and 5.2L V10 FSI engines
☐ Timing Belt - Replace. Check condition of timing belt tensioning system, dampening pulleys, and idler pulleys and replace if necessary.	Every 110,000 miles	Only TTS
☐ Timing Belt - Replace. Check condition of timing belt tensioning system, dampening pulleys, and idler pulleys and replace if necessary.	Every 130,000 miles	Only A3 2.0L TDI
☐ Tiptronic Gear Box - Change ATF	First 35,000 miles and thereafter every 40,000 miles	Only Q5 Hybrid

1.2 MY 2015 Maintenance Schedule (Gas and Hybrid Vehicles) - Canada

Note

The intervals shown in this table are based on vehicles operating under normal conditions. In case of severe conditions, such as extremely low temperatures, excessive dust, etc., it is necessary for certain operations to be carried out in between the given intervals. This applies particularly to engine oil changes and the cleaning or replacing of the air cleaner filter element.

Service Intervals in Kilometers	8K	25K	40K	55K	70K	85K	100K	115K
⇒ Standard Maintenance ¹⁾	X		X		X		X	
⇒ Major Maintenance ²⁾		X		X		X		X
⇒ Additional Maintenance Items								

✓ all completed items



1.2.1 Standard Maintenance

Labor Item	Vehicle Application
☐ AdBlue® Fluid - Fill completely with fresh fluid (24 liters max.) and adapt learned values for AdBlue tank under guided fault finding after filling fluid	Only all TDI models
☐ Brake System - Check for damage and leaks, thickness of pads, and brake fluid level.	All Vehicles
☐ Engine Oil/Oil Filter - Change oil and replace filter	All Vehicles
☐ On-board Diagnosis - Check	Flex fuel vehicles only
☐ Service Reminder Indicator Display - Reset display	All Vehicles
☐ Tires and Spare Wheel - Check for wear and damage. Check tire pressure. Reset Tire Pressure Monitoring System (TPMS)	All Vehicles
☐ Windshield Washer and Headlight Washing System - Add fluid if necessary. Check adjustment and function	All Vehicles
☐ Wiper Blades - Check condition and replace if necessary	All Vehicles
☐ See ⇒ Additional Maintenance Items	All Vehicles

Standard Maintenance Additional Item

Note

Additional item at 8,000 kilometers or 1 year after delivery, whichever occurs first.

Labor Item	Vehicle Application
☐ Tires - Rotate and reset TPMS	All except R8

1.2.2 Major Maintenance

Labor Item	Vehicle Application
☐ Automatic Transmission and Final Drive - Check for leaks	All Vehicles
☐ Battery - Small 12 volt side battery located in the trunk compartment on left side. Check for clean terminals (no corrosion), properly mounted housing and no damage; replace if necessary	Only Q5 hybrid
☐ Battery - Check for clean terminals (no corrosion), properly mounted housing and no damage; replace if necessary. Also, check the acid level of battery only if the level can be seen through the housing and fill if necessary	All except Q5 hybrid
☐ Cabriolet Front Latch – Lubricate	Only A3 Cabriolet, A5 Cabriolet, S5 Cabriolet
☐ Cooling System - Check coolant level and add coolant if necessary	All Vehicles
☐ Crash Active Headrest - Check function	Only A8



Labor Item	Vehicle Application
☐ Door Hinges and Straps- Lubricate	Only TT, TTS, R8 Coupe, R8 Spyder, Q7
☐ Drive Shafts - Check boots	All Vehicles
☐ Dust and Pollen Filter - Replace filter	All Vehicles
☐ Engine Compartment - Check for leaks	All Vehicles
☐ Exhaust system - Check for damage and leaks	All Vehicles
☐ Front and Rear Axle - Check for excessive play. Check dust seals on ball joints and tie rod ends	All Vehicles
☐ Hood Lid Hinges- Lubricate	Only TT, TTS, R8 Coupe, R8 Spyder,
☐ Horn - Check function	All Vehicles
☐ Lighting, Front - Check function of parking lights, low beams, high beams, fog lights, blinkers and hazard lights	All Vehicles
☐ Lighting, Rear - Check function of brake lights (including third brake light), tail lights, back-up lights, rear fog lights, license plate lights, blinkers and hazard lights	All Vehicles
☐ Manual Transmission and Final Drive - Check for leaks	All Vehicles
☐ Plenum Panel - Remove cover for plenum panel to check water drain and clean if necessary	All Models
☐ Ribbed V-belt and Tensioner - Check condition and replace if necessary	Only R8 coupe and R8 Spyder
☐ Road Test - Check engine performance, clutch, manual/automatic transmission, braking (including hand and foot brake), steering, wheels, wheel bearings, drive shaft, horn, hybrid vehicles (electric drive for operational readiness)	All Vehicles
☐ Roll-over protection: check function with soft top down	Only A5/S5 Cabriolet and R8 Spyder
☐ Snow Screen for Air Cleaner - Clean	Only A4, allroad®, S4, A5, S5, RS 5, Q5, SQ5, and Q5 hybrid
☐ Sunroof Systems (All) - Clean guide rails and lubricate with grease	All Vehicles
☐ Tire Repair Set - Check renewal date (where applicable)	All Vehicles
☐ Underbody - Check for damage and leaks	All Vehicles
☐ Visual Check - Check the chassis for possible paint damage and corrosion, from the inside and outside with the doors as well as hood and trunk lids open	All Vehicles
☐ See → Additional Maintenance Items	All Vehicles



1.2.3 Additional Maintenance Items

Labor Item	Interval	Vehicle Application
☐ AdBlue® Fluid - Replace only if AdBlue® has not been filled within the last 4 years	Every 4 years regardless of mileage	Only all TDI models
☐ Air Filter - Clean housing and replace filter	First 55,000 kilometers and thereafter every 60,000 kilometers	Only S6, S7, RS7, A8 3.0L V6 TDI, A8 3.0L V6 TFSI , *A8 4.0L V8 TFSI, and TTS * Note: The S8 4.0L V8 engine is not included in this interval.
☐ Air Filter - Clean housing and replace filter	First 85,000 kilometers and thereafter every 90,000 kilometers	Only S8 4.0L V8
☐ Air Filter - Clean housing and replace filter	First 85,000 kilometers and thereafter every 90,000 kilometers	Except RS5, TTS, S6, S7, RS7, A8 3.0L TFSI, A8 3.0L TDI, A8 4.0 TFSI * Note: This interval includes the S8 4.0L V8 TFSI engine.
☐ Air Filter - Clean housing and replace filter	First 25,000 kilometers and thereafter every 30,000 kilometers	Only RS 5
☐ AWD Clutch - Change oil (if equipped)	Every 3 years	A3 with AWD, Q3 with AWD TT, TTS
☐ Brake Discs - Check thickness	First at 55,000 kilometers or 4 years, whichever occurs first and thereafter, every 60,000 kilometers or 4 years, whichever occurs first	All Vehicles
☐ Brake and Clutch System, Changing Brake Fluid	Every 2 years regardless of mileage	All Vehicles
☐ Continuously Variable Transmission (multitronic™) - Change ATF	First 55,000 kilometers and thereafter every 60,000 kilometers	All Vehicles
☐ Diesel Particulate Filter (DPF) – Check ash loading according to manufacturer work procedure. *Replace if necessary	First 175,000 kilometers or 165,000 kilometers after a Diesel Particulate Filter (DPF) replacement	All TDI Vehicles * Note: If DPF replacement is not necessary, perform check every 20,000 miles (30,000 km) thereafter until replacement becomes necessary.
☐ Doors - Lubricate door hinges, straps, locks, and hood latch	First at 55,000 kilometers or 4 years, whichever occurs first and thereafter, every 60,000 kilometers or 4 years, whichever occurs first	All Vehicles
☐ S tronic Transmission - Change MTF oil for gearbox	First 25,000 kilometers and thereafter every 30,000 kilometers	Only RS 5



Labor Item	Interval	Vehicle Application
☐ S tronic Transmission - Change fluid and filter element for clutch hydraulics	First 55,000 kilometers and thereafter every 60,000 kilometers	Only A3, TT, TTS, S4, S5, S5 Cabriolet, RS5, S6, S7, and R8 Coupe, R8 Spyder
☐ Fuel Filter- Replace	First 25,000 kilometers and thereafter every 30,000 kilometers	All TDI models
☐ Interior Lights - Check all interior lights, glove box compartment illumination, control lights, and MMI (if applicable)	First at 55,000 kilometers or 4 years, whichever occurs first and thereafter, every 60,000 kilometers or 4 years, whichever occurs first	All Vehicles
☐ Power Steering Fluid - Check fluid level	First at 55,000 kilometers or 4 years, whichever occurs first and thereafter, every 60,000 kilometers or 4 years, whichever occurs first	Only Q7
☐ Rear Sport Differential - Change ATF for clutch hydraulics and differential oil	First 55,000 kilometers and thereafter every 60,000 kilometers	Only RS5 and RS7
☐ Ribbed V-belt - Replace only the belt for the compressor drive	First at 85,000 kilometers and thereafter every 90,000 kilometers	All vehicles with the 3.0L V6 TFSI
Ribbed V-belt - Check and replace if necessary. Check tension of belt drive with a manual tensioner and retention if necessary.	First at 115,000 kilometers and thereafter every 120,000 kilometers	All Vehicles
☐ Spark Plugs - Replace	First at 55,000 kilometers or 6 years, whichever occurs first and thereafter, every 60,000 kilometers or 6 years, whichever occurs first	Only 4.0L V8 TFSI, A8L W12, and *2.0L TFSI * Note: Excludes: Q3 and all 2.0L TFSI Flex Fuel engines
☐ Spark Plugs - Replace	First at 55,000 kilometers or 6 years, whichever occurs first and thereafter, every 45,000 kilometers or 6 years, whichever occurs first	Only 2.0L TFSI Flex Fuel engine
☐ Spark Plugs - Replace	First at 85,000 kilometers or 6 years, whichever occurs first and thereafter, every 90,000 kilometers or 6 years, whichever occurs first	Only A3 1.8 TFSI, Q3 2.0T, all vehicles with 3.0L V6 TFSI, 4.2L V8 and 5.2L V10 FSI engines



Labor Item	Interval	Vehicle Application
☐ Timing Belt - Replace. Check condition of timing belt tensioning system, dampening pulleys, and idler pulleys and replace if necessary.	Every 175,000 kilometers	Only TTS
☐ Timing Belt - Replace. Check condition of timing belt tensioning system, dampening pulleys, and idler pulleys and replace if necessary.	Every 205,000 kilometers	Only A3 2.0l TDI
☐ Tiptronic Gear Box - Change ATF	First 55,000 kilometers and thereafter every 60,000 kilometers	Only Q5 Hybrid