



2020 Audi Service

1 Maintenance Schedules (USA and Canada)

⇒ MY 2020 Maintenance Schedule (Gas and Hybrid Vehicles) - United States

⇒ MY 2020 Maintenance Schedule (Gas and Hybrid Vehicles) - Canada

⇒ MY 2020 Maintenance Schedule (Battery Electric Vehicles) - United States

⇒ MY 2020 Maintenance Schedule (Battery Electric Vehicles) - Canada

1.1 MY 2020 Maintenance Schedule (Gas and Hybrid Vehicles) - United States

Note

The intervals shown in this table are based on vehicles operating under normal conditions. In case of severe conditions, such as extremely low temperatures, excessive dust, etc., it is necessary for certain operations to be carried out in between the given intervals. This applies particularly to engine oil changes and the cleaning or replacing of the air cleaner filter element.

Service Intervals in Miles	10K	20K	30K	40K	50K	60K	70K	80K
⇒ Minor Maintenance ¹⁾	X		X		X		X	
⇒ Standard Maintenance ²⁾		X		X		X		X
⇒ Additional Maintenance Items								

¹⁾ First minor maintenance service at 10,000 miles or 1 year after delivery, whichever occurs first. Minor maintenance services thereafter occur at intervals of 20,000 miles or every 2 years after the last minor maintenance service, whichever occurs first.

²⁾ First standard maintenance service at 20,000 miles or 2 years after delivery, whichever occurs first. Standard maintenance services thereafter occur at intervals of 20,000 miles or every 2 years after the last standard maintenance service, whichever occurs first.

✓ all completed items

1.1.1 Minor Maintenance

Labor Item	Vehicle Application
☐ Brake system - Check the thickness of the brake pads	All Vehicles
☐ Engine oil & oil filter - Change oil and replace filter	All Vehicles
☐ Multi-point inspection - Complete	All Vehicles
☐ Service reminder indicator display - Reset display	All Vehicles
☐ Tire repair kit - Check and record the completeness and expiration date (if equipped)	All Vehicles
☐ See ⇒ Additional Maintenance Items	All Vehicles



1.1.2 Standard Maintenance

Labor Item	Vehicle Application
☐ Body / chassis - Visually inspect for possible paint damage and corrosion, from the inside and outside, with the doors as well as hood and trunk lids open	All Vehicles
☐ Brake system - Check for damage and leaks, condition of brake hoses and the presence of the bleeder caps; Check the thickness of the brake pads	All Vehicles
☐ Charging cable - Check for damage (if present in vehicle during inspection)	Only: - A7 55 TFSIe - A8L 60 TFSIe - Q5 55 TFSIe
☐ Charging socket - Check for contamination and damage	Only: - A7 55 TFSIe - A8L 60 TFSIe - Q5 55 TFSIe
☐ Connected box battery (for Audi Connected Services) - Check state health with Vehicle Diagnostic Tester in Guided Functions	Only: - A4 40 TFSI, A4 45 TFSI, S4 - A4 allroad® 45 TFSI - A5 45 TFSI, S5 - A6 45 TFSI, A6 55 TFSI, S6 - A6 allroad® 55 TFSI - A7 55 TFSI, A7 55 TFSIe, S7 - A8L 55 TFSI, A8L 60 TFSI, A8L 60 TFSIe, S8 LWB - Q5 45 TFSI, Q5 55 TFSIe, SQ5 - Q7 45 TFSI, Q7 55 TFSI, SQ7 - Q8 55 TFSI, SQ8, RS Q8
☐ Convertible top - Lubricate latch mechanism	Only: - A5 45 TFSI Cabriolet - S5 Cabriolet
☐ Door hinges (including door stay) and door latch - Lubricate	All Vehicles
☐ High voltage cooling system - Check coolant level according to ElsaPro NOTE: For high-voltage electrical components	Only: - A7 55 TFSIe - A8L 60 TFSIe - Q5 55 TFSIe
☐ Engine cooling system - Check freeze protection and coolant level	All Vehicles
☐ Engine oil & oil filter - Change oil and replace filter	All Vehicles
☐ Engine, transmission, final drive, steering - Visual inspection for leaks and damage (with front noise insulation removed)	All Vehicles
☐ Exterior lighting function - Check front and rear lights; high beams, low beams, turn signals, cornering lights, reverse lights, license plate lights, fog lights, and hazard warning lights	All Vehicles
☐ First aid kit (if equipped) - Check and enter expiration date YYYY / MM _____	All Vehicles



Labor Item	Vehicle Application
☐ Front flap lock - Lubricate	Only: - R8 Coupe - R8 Spyder
☐ Fuel tank flap system - Check the water drain according to ElsaPro	Only: - R8 Coupe - R8 Spyder
☐ Headlights - Check adjustment	All Vehicles
☐ Hood safety catch – Lubricate	Only: - A3 40 TFSI, A3 45 TFSI, S3, RS 3 - R8 Coupe, R8 Spyder
☐ Horn - Check function	All Vehicles
☐ Instrument cluster - Check warning and indicator lights	All Vehicles
☐ Interior lights - Check all interior lights, trunk lights and glove box compartment illumination	All Vehicles
☐ Multi-point inspection - Complete	All Vehicles
☐ Oil fill area - Check water drain according to ElsaPro	Only: - R8 Coupe, R8 Spyder
☐ Plenum chamber and water drain valves - Check for dirt. NOTE: Time spent cleaning of item is a separate charge for service time.	Only: - A6 (all models) - A7 (all models) - A8L (all models) - Q7 (all models) - Q8 (all models)
☐ Road test - Perform	All Vehicles
☐ Rollover protection - Check the rollover protection when the convertible top is open	Only R8 Spyder
☐ Safety belts- Check function and condition of belt, belt tongue, and latch	All Vehicles
☐ Service reminder indicator display - Reset display	All Vehicles
☐ Spare tire (if equipped) - Check condition and tire inflation pressure; adjust if necessary	All Vehicles
☐ Spoiler - Lubricate rear spoiler	Only: - TT, TTS, and TT RS (if equipped)
☐ Sunroof systems: check function (if equipped)	All Vehicles
☐ Suspension and axle components (front and rear) - Check dust seals on ball joints and tie rod ends; check for excessive play	All Vehicles
☐ Tires - Check condition and tire tread wear; Check and record the tread depth.	All Vehicles
☐ Tires - Check tire inflation pressure and adjust if necessary	All Vehicles
☐ Tire repair kit (if equipped) - Check and record the completeness and expiration date	All Vehicles
☐ Underbody - Check for damage and leaks, check the wheel well liners, underbody paneling and all lines are properly mounted	All Vehicles



Labor Item	Vehicle Application
☐ Warning triangle and first aid kit (if equipped) - Check if present	All Vehicles
☐ Windshield washer and headlight washing system - Add fluid if necessary; Check adjustment and function	All Vehicles
☐ Wiper blades - Check condition and replace if necessary	All Vehicles
☐ See ⇒ Additional Maintenance Items	All Vehicles

1.1.3 Additional Maintenance Items

Labor Item	Interval	Vehicle Application
☐ Air filter - Replace	Every 60,000 miles	All Vehicles except RS 7
☐ Air filter - Replace	Every 20,000 miles	Only RS 7
☐ AWD clutch - Change fluids (if equipped)	Every 3 years regardless of mileage	Only: - A3 45 TFSI, S3, RS 3 - Q3 40 TFSI, Q3 45 TFSI - TT Coupe 45 TFSI, TT Roadster 45 TFSI - TTS Coupe, TT RS Coupe
☐ Brake and Clutch System, Changing Brake Fluid	Every 2 years regardless of mileage	All Vehicles
☐ Dust and pollen filter - Replace	Every 20,000 miles or 2 years, whichever occurs first	All Vehicles
☐ Fragrance cartridges - Change (if equipped)	Every 2 years regardless of mileage	All Vehicles with 2V9 PR-Code
☐ Front Differential - Change fluids	Every 120,000 miles or 10 years, whichever occurs first	Only: - R8 Coupe, R8 Spyder
☐ Panoramic sunroof systems (PSD)- Check drainage system by fluid check (if equipped)	Every 20,000 miles or 2 years, whichever occurs first	All Vehicles with 3FU PR-Code
☐ Rear axle, quattro® sport - Change fluids	Every 60,000 miles	Only: - S6 - S7 - SQ7 - SQ8, RS Q8
☐ Ribbed V-belt starter / generator drive (including tensioner) - Replace	Every 60,000 miles	Only: - A6 45 TFSI
☐ Spark plugs - Replace	Every 30,000 miles or 3 years, whichever occurs first	Only: - RS 3 - S6 - S7, RS 7 - A8L 60 TFSI, S8 LWB - SQ7 - SQ8, RS Q8 - TT RS



Labor Item	Interval	Vehicle Application
☐ Spark plugs - Replace	Every 40,000 miles or 6 years, whichever occurs first	Only: - S3 - A4 40 TFSI, A4 45 TFSI, A4 all-road® 45 TFSI, S4 - A5 45 TFSI, S5 - A6 45 TFSI, A6 55 TFSI, A6 all-road® 55 TFSI - A7 55 TFSI, A7 55 TFSIe - A8L 55 TFSI, A8L 60 TFSIe - Q5 45 TFSI, Q5 55 TFSIe, SQ5 - Q7 45 TFSI, Q7 55 TFSI - Q8 55 TFSI - TTS Coupe
☐ Spark plugs - Replace	Every 60,000 miles or 6 years, whichever occurs first	Only: - R8 Coupe, R8 Spyder
☐ Spark plugs - Replace	Every 80,000 miles or 6 years, whichever occurs first	Only: - A3 40 TFSI, A3 45 TFSI - Q3 40 TFSI, Q3 45 TFSI - TT Coupe 45 TFSI, TT Roadster 45 TFSI
☐ S tronic transmission - Change fluid and filter	Every 40,000 miles	Only: - R8 Coupe, R8 Spyder
☐ S tronic transmission - Change fluid	Every 40,000 miles	Only: - RS 3 - A4 40 TFSI, A4 45 TFSI, A4 all-road® 45 TFSI - A5 45 TFSI - A6 45 TFSI, A6 55 TFSI, A6 all-road® 55 TFSI - A7 55 TFSI, A7 55 TFSIe - Q5 45 TFSI, Q5 55 TFSIe - TT RS
☐ S tronic transmission - Change fluid	Every 80,000 miles	Only: - A3 40 TFSI, A3 45 TFSI, S3 - TT Coupe 45 TFSI, TT Roadster 45 TFSI, TTS Coupe

1.2 MY 2020 Maintenance Schedule (Gas and Hybrid Vehicles) - Canada

Note

The intervals shown in this table are based on vehicles operating under normal conditions. In case of severe conditions, such as extremely low temperatures, excessive dust, etc., it is necessary for certain operations to be carried out in between the given intervals. This applies particularly to engine oil changes and the cleaning or replacing of the air cleaner filter element.



Service Intervals in Kilometers	15K	30K	45K	60K	75K	90K	105 K	120 K
⇒ Minor Maintenance ¹⁾	X		X		X		X	
⇒ Standard Maintenance ²⁾		X		X		X		X
⇒ Additional Maintenance Items								

¹⁾ First minor maintenance service at 15,000 km or 1 year after delivery, whichever occurs first. Minor maintenance services thereafter occur at intervals of 30,000 km or every 2 years after the last minor maintenance service, whichever occurs first.

²⁾ First standard maintenance service at 30,000 km or 2 years after delivery, whichever occurs first. Standard maintenance services thereafter occur at intervals of 30,000 km or every 2 years after the last standard maintenance service, whichever occurs first.

✓ all completed items

1.2.1 Minor Maintenance

Labor Item	Vehicle Application
☐ Brake system - Check the thickness of the brake pads	All Vehicles
☐ Engine oil & oil filter - Change oil and replace filter	All Vehicles
☐ Service reminder indicator display - Reset display	All Vehicles
☐ Tire repair kit - Check and record the completeness and expiration date (if equipped)	All Vehicles
☐ See ⇒ Additional Maintenance Items	All Vehicles

1.2.2 Standard Maintenance

Labor Item	Vehicle Application
☐ Body / chassis - Visually inspect for possible paint damage and corrosion, from the inside and outside, with the doors as well as hood and trunk lids open	All Vehicles
☐ Brake system - Check for damage and leaks, condition of brake hoses and the presence of the bleeder caps; Check the thickness of the brake pads	All Vehicles
☐ Charging cable - Check for damage (if present in vehicle during inspection)	Only: - A7 55 TFSIe - A8L 60 TFSIe - Q5 55 TFSIe
☐ Charging socket - Check for contamination and damage	Only: - A7 55 TFSIe - A8L 60 TFSIe - Q5 55 TFSIe



Labor Item	Vehicle Application
☐ Connected box battery (for Audi Connected Services) - Check state health with Vehicle Diagnostic Tester in Guided Functions	Only: - A4 40 TFSI, A4 45 TFSI, S4 - A4 allroad® 45 TFSI - A5 45 TFSI, S5 - A6 45 TFSI, A6 55 TFSI, S6 - A6 allroad® 55 TFSI - A7 55 TFSI, A7 55 TFSIe, S7, RS 7 - A8L 55 TFSI, A8L 60 TFSI, A8L 60 TFSIe, S8 LWB - Q5 45 TFSI, Q5 55 TFSIe, SQ5 - Q7 45 TFSI, Q7 55 TFSI, SQ7 - Q8 55 TFSI, SQ8, RS Q8
☐ Convertible top - Lubricate latch mechanism	Only: - A5 45 TFSI Cabriolet - S5 Cabriolet
☐ Door hinge (including door stay) and door latch - Lubricate	All Vehicles
☐ High voltage cooling system - Check coolant level according to ElsaPro	Only: - A7 55 TFSIe - A8L 60 TFSIe - Q5 55 TFSIe
☐ Engine cooling system - Check freeze protection and coolant level	All Vehicles
☐ Engine oil & oil filter - Change oil and replace filter	All Vehicles
☐ Engine, transmission, final drive, steering - Visual inspection for leaks and damage (with front noise insulation removed)	All Vehicles
☐ Exterior lighting function - Check front and rear lights; high beams, low beams, turn signals, cornering lights, reverse lights, license plate lights, fog lights, and hazard warning lights	All Vehicles
☐ First aid kit (if equipped) - Check and enter expiration date YYYY / MM _____	All Vehicles
☐ Front flap lock - Lubricate	Only: - R8 Coupe - R8 Spyder
☐ Fuel tank flap system - Check the water drain according to ElsaPro	Only: - R8 Coupe - R8 Spyder
☐ Headlights - Check adjustment	All Vehicles
☐ Hood safety catch - Lubricate	Only: - A3 40 TFSI, A3 45 TFSI, S3, RS 3 - R8 Coupe, R8 Spyder
☐ Horn - Check function	All Vehicles
☐ Instrument cluster - Check warning and indicator lights	All Vehicles
☐ Interior lights - Check all interior lights, trunk lights and glove box compartment illumination	All Vehicles



Labor Item	Vehicle Application
☐ Oil Fill Area - Check water drain according to ElsaPro	Only: - R8 Coupe, R8 Spyder
☐ Plenum chamber and water drain valves - Check for dirt. NOTE: Time spent cleaning of item is a separate charge for service time.	Only: - A6 (all models) - A7 (all models) - A8L (all models) - Q7 (all models) - Q8 (all models)
☐ Road test - Perform	All Vehicles
☐ Rollover protection - Check the rollover protection when the convertible top is open	Only R8 Spyder
☐ Safety belts- Check function and condition of belt, belt tongue, and latch	All Vehicles
☐ Service reminder indicator display - Reset display	All Vehicles
☐ Spare tire (if equipped) - Check condition and tire inflation pressure; adjust if necessary	All Vehicles
☐ Spoiler - Lubricate rear spoiler	Only: - TT, TTS, and TT RS (if equipped)
☐ Sunroof systems: check function (if equipped)	All Vehicles
☐ Suspension and axle components (front and rear) - Check dust seals on ball joints and tie rod ends; check for excessive play	All Vehicles
☐ Tires - Check condition and tire tread wear; Check and record the tread depth.	All Vehicles
☐ Tires - Check tire inflation pressure and adjust if necessary	All Vehicles
☐ Tire repair kit (if equipped) - Check and record the completeness and expiration date	All Vehicles
☐ Underbody - Check for damage and leaks, check the wheel well liners, underbody paneling and all lines are properly mounted	All Vehicles
☐ Warning triangle and first aid kit (if equipped) - Check if present	All Vehicles
☐ Windshield washer and headlight washing system - Add fluid if necessary; Check adjustment and function	All Vehicles
☐ Wiper blades - Check condition and replace if necessary	All Vehicles
☐ See ⇒ Additional Maintenance Items	All Vehicles

1.2.3 Additional Maintenance Items

Labor Item	Interval	Vehicle Application
☐ Air filter - Replace	Every 90,000 km	All Vehicles except RS 7
☐ Air filter - Replace	Every 30,000 km	Only RS 7



Labor Item	Interval	Vehicle Application
☐ AWD clutch - Change fluids (if equipped)	Every 3 years regardless of mileage	Only: - A3 45 TFSI, S3, RS 3 - Q3 40 TFSI, Q3 45 TFSI - TT Coupe 45 TFSI, TT Roadster 45 TFSI - TTS Coupe, TT RS Coupe
☐ Brake and Clutch System, Changing Brake Fluid	Every 2 years regardless of mileage	All Vehicles
☐ Dust and pollen filter - Replace	Every 30,000 km or 2 years, whichever occurs first	All Vehicles
☐ Fragrance cartridges - Change (if equipped)	Every 2 years regardless of mileage	All Vehicles with 2V9 PR-Code
☐ Front Differential - Change fluids	Every 180,000 km or 10 years, whichever occurs first	Only: - R8 Coupe, R8 Spyder
☐ Panorama sunroof systems (PSD): check drainage system by fluid check (If equipped)	Every 30,000 km or 2 years, whichever occurs first	All Vehicles with 3FU Pr-Code
☐ Rear axle, quattro® sport - Change fluids	Every 90,000 km	Only: - S6 - S7 - SQ7 - SQ8, RS Q8
☐ Ribbed V-belt starter / generator drive (including tensioner) - Replace	Every 90,000 km	Only: - A6 45 TFSI
☐ Spark plugs - Replace	Every 45,000 km or 3 years, whichever occurs first	Only: - RS 3 - S6 - S7, RS 7 - A8L 60 TFSI, S8 LWB - SQ7 - SQ8, RS Q8 - TT RS
☐ Spark plugs - Replace	Every 60,000 km or 6 years, whichever occurs first	Only: - S3 - A4 40 TFSI, A4 45 TFSI, A4 all-road® 45 TFSI, S4 - A5 45 TFSI, S5 - A6 45 TFSI, A6 55 TFSI, A6 all-road® 55 TFSI - A7 55 TFSI, A7 55 TFSIe - A8L 55 TFSI, A8L 60 TFSIe - Q5 45 TFSI, Q5 55 TFSIe, SQ5 - Q7 45 TFSI, Q7 55 TFSI - Q8 55 TFSI - TTS Coupe



Labor Item	Interval	Vehicle Application
☐ Spark plugs - Replace	Every 90,000 km or 6 years, whichever occurs first	Only: - R8 Coupe, R8 Spyder
☐ Spark plugs - Replace	Every 120,000 km or 6 years, whichever occurs first	Only: - A3 40 TFSI, A3 45 TFSI - Q3 40 TFSI, Q3 45 TFSI - TT Coupe 45 TFSI, TT Roadster 45 TFSI
☐ S tronic transmission - Change fluid and filter	Every 60,000 km	Only: - R8 Coupe, R8 Spyder
☐ S tronic transmission - Change fluid	Every 60,000 km	Only: - RS 3 - A4 40 TFSI, A4 45 TFSI, A4 all-road® 45 TFSI - A5 45 TFSI - A6 45 TFSI, A6 55 TFSI, A6 all-road® 55 TFSI - A7 55 TFSI, A7 55 TFSIe - Q5 45 TFSI, Q5 55 TFSIe - TT RS
☐ S tronic transmission - Change fluid	Every 120,000 km	Only: - A3 40 TFSI, A3 45 TFSI, S3 - TT Coupe 45 TFSI, TT Roadster 45 TFSI, TTS Coupe

1.3 MY 2020 Maintenance Schedule (Battery Electric Vehicles) - United States

Note

The intervals shown in this table are based on vehicles operating under normal conditions. In case of severe conditions, such as extremely low temperatures, excessive dust, etc., it is necessary for certain operations to be carried out in between the given intervals.

Service Intervals in Miles	10K	20K	30K	40K	50K	60K	70K	80K
⇒ Minor Maintenance ¹⁾	X		X		X		X	
⇒ Standard Maintenance ²⁾		X		X		X		X
⇒ Additional Maintenance Items								

¹⁾ First minor maintenance service at 10,000 miles or 1 year after delivery, whichever occurs first. Minor maintenance services thereafter occur at intervals of 20,000 miles or every 2 years after the last minor maintenance service, whichever occurs first.

²⁾ First standard maintenance service at 20,000 miles or 2 years after delivery, whichever occurs first. Standard maintenance services thereafter occur at intervals of 20,000 miles or every 2 years after the last standard maintenance service, whichever occurs first.

✓ all completed items



1.3.1 Minor Maintenance

Labor Item	
☐	Brake system - Check the thickness of the brake pads
☐	Connected box battery (for Audi Connected Services) - Check state health with Vehicle Diagnostic Tester in Guided Functions
☐	First aid kit - Check and enter expiration date YYYY / MM _____ (if applicable)
☐	Front and rear axle / suspension components - Check dust seals on ball joints and tie rod ends; check for excessive play
☐	Instrument cluster - Check warning and indicator lights
☐	Multi-point inspection - Complete
☐	Service reminder indicator display - Reset display
☐	Space saver spare wheel and tire - Check condition and tire inflation pressure, adjust if necessary (if equipped)
☐	Tires - Check condition and tire tread wear; Check and record the tread depth.
☐	Tires - Check tire inflation pressure and adjust if necessary
☐	Tire repair kit - Check and record the completeness and expiration date (if equipped)
☐	Wiper blades - Check condition and replace if necessary
☐	See ⇒ Additional Maintenance Items

1.3.2 Standard Maintenance

Labor Item	
☐	Axle drive, front - drain coolant (with small cover removed)
☐	Body / chassis - Visually inspect for possible paint damage and corrosion, from the inside and outside, with the doors as well as hood and trunk lids open
☐	Brake system - Check for damage and leaks, condition of brake hoses and the presence of the bleeder caps; Check the thickness of the brake pads
☐	Charging cable - Check for damage (if present in vehicle during inspection)
☐	Charging socket - Check for contamination and damage
☐	Connected box battery (for Audi Connected Services) - Check state health with Vehicle Diagnostic Tester in Guided Functions
☐	Door hinges (including door stay) and door latch - Lubricate
☐	Exterior lighting function - Check front and rear lights; high beams, low beams, turn signals, cornering lights, brake lights, reverse lights, license plate lights, fog lights, and hazard warning lights
☐	First aid kit (if equipped) - Check and enter expiration date YYYY / MM _____
☐	Headlights - Check adjustment
☐	High voltage cooling system - Check coolant level according to ElsaPro
☐	High voltage safety instruction labels - Check safety instruction labels for legibility
☐	High voltage system components- - Check for damage and leaks; check cables and insulation for damage and proper mounting
☐	Horn - Check function



Labor Item
☐ Instrument cluster - Check warning and indicator lights
☐ Interior lights - Check all interior lights, trunk lights and glove box compartment illumination
☐ Motor compartment - Check transmission, final drive, and steering for leaks and damage (including visible HV components with front noise insulation removed)
☐ Multi-point inspection - Complete
☐ Plenum chamber and water drain valves - Check for dirt. and clean if necessary NOTE: Time spent cleaning of item is a separate charge for service time.
☐ Road test - Perform
☐ Safety belts- Check function and condition of belt, belt tongue, and latch
☐ Service reminder indicator display - Reset display
☐ Space saver spare wheel and tire - Check condition and tire inflation pressure, adjust if necessary (if equipped)
☐ Sunroof systems - Check function (if equipped)
☐ Suspension and axle components (front and rear) - Check dust seals on ball joints and tie rod ends; check for excessive play
☐ Tires - Check condition and tire tread wear; Check and record the tread depth.
☐ Tires - Check tire inflation pressure and adjust if necessary
☐ Tire repair kit (if equipped) - Check and record the completeness and expiration date
☐ Underbody - Check for damage and leaks, check the wheel well liners, underbody paneling and all lines are properly mounted (including visible HV components)
☐ Warning triangle and first aid kit (if equipped) - Check if present
☐ Windshield washer and headlight washing system - Add fluid if necessary; Check adjustment and function
☐ Wiper blades - Check condition and replace if necessary
☐ See ⇒ Additional Maintenance Items

1.3.3 Additional Maintenance Items

Labor Item	Interval
☐ Brake fluid - Change	Every 2 years regardless of mileage
☐ Dust and pollen filter - Replace	Every 20,000 miles or 2 years, whichever occurs first
☐ Fragrance cartridges - Change (if equipped)	Every 2 years regardless of mileage
☐ Panorama sunroof systems (PSD): check drainage system by fluid check (If equipped)	Every 20,000 miles or 2 years, whichever occurs first
☐ Rear axle drive - Replace coolant cartridge (with cover removed) (If equipped)	Every 20,000 miles or 2 years, whichever occurs first



1.4 MY 2020 Maintenance Schedule (Battery Electric Vehicles) - Canada

Note

The intervals shown in this table are based on vehicles operating under normal conditions. In case of severe conditions, such as extremely low temperatures, excessive dust, etc., it is necessary for certain operations to be carried out in between the given intervals.

Service Intervals in Kilometers	15K	30K	45K	60K	75K	90K	105K	120K
⇒ Minor Maintenance ¹⁾	X		X		X		X	
⇒ Standard Maintenance ²⁾		X		X		X		X
⇒ Additional Maintenance Items								

¹⁾ First minor maintenance service at 15,000 km or 1 year after delivery, whichever occurs first. Minor maintenance services thereafter occur at intervals of 30,000 km or every 2 years after the last minor maintenance service, whichever occurs first.

²⁾ First standard maintenance service at 30,000 km or 2 years after delivery, whichever occurs first. Standard maintenance services thereafter occur at intervals of 30,000 km or every 2 years after the last standard maintenance service, whichever occurs first.

✓ all completed items

1.4.1 Minor Maintenance

Labor Item
☐ Brake system - Check the thickness of the brake pads
☐ Connected box battery (for Audi Connected Services) - Check state health with Vehicle Diagnostic Tester in Guided Functions
☐ First aid kit - Check and enter expiration date YYYY / MM _____ (if applicable)
☐ Front and rear axle / suspension components - Check dust seals on ball joints and tie rod ends; check for excessive play
☐ Instrument cluster - Check warning and indicator lights
☐ Service reminder indicator display - Reset display
☐ Space saver spare wheel and tire - Check condition and tire inflation pressure, adjust if necessary (if equipped)
☐ Tires - Check condition and tire tread wear; Check and record the tread depth.
☐ Tires - Check tire inflation pressure and adjust if necessary
☐ Tire repair kit - Check and record the completeness and expiration date (if equipped)
☐ Wiper blades - Check condition and replace if necessary
☐ See ⇒ Additional Maintenance Items



1.4.2 Standard Maintenance

Labor Item
☐ Axle drive, front - drain coolant (with small cover removed)
☐ Body / chassis - Visually inspect for possible paint damage and corrosion, from the inside and outside, with the doors as well as hood and trunk lids open
☐ Brake system - Check for damage and leaks, condition of brake hoses and the presence of the bleeder caps; Check the thickness of the brake pads
☐ Charging cable - Check for damage (if present in vehicle during inspection)
☐ Charging socket - Check for contamination and damage
☐ Connected box battery (for Audi Connected Services) - Check state health with Vehicle Diagnostic Tester in Guided Functions
☐ Door hinges (including door stay) and door latch - Lubricate
☐ Exterior lighting function - Check front and rear lights; high beams, low beams, turn signals, cornering lights, brake lights, reverse lights, license plate lights, fog lights, and hazard warning lights
☐ First aid kit (if equipped) - Check and enter expiration date YYYY / MM _____
☐ Headlights - Check adjustment
☐ High voltage cooling system - Check coolant level according to ElsaPro
☐ High voltage safety instruction labels - Check safety instruction labels for legibility
☐ High voltage system components- - Check for damage and leaks; check cables and insulation for damage and proper mounting
☐ Horn - Check function
☐ Instrument cluster - Check warning and indicator lights
☐ Interior lights - Check all interior lights, trunk lights and glove box compartment illumination
☐ Motor compartment - Check transmission, final drive, and steering for leaks and damage (including visible HV components with front noise insulation removed)
☐ Plenum chamber and water drain valves - Check for dirt. and clean if necessary NOTE: Time spent cleaning of item is a separate charge for service time.
☐ Road test - Perform
☐ Safety belts- Check function and condition of belt, belt tongue, and latch
☐ Service reminder indicator display - Reset display
☐ Space saver spare wheel and tire - Check condition and tire inflation pressure, adjust if necessary (if equipped)
☐ Sunroof systems - Check function (if equipped)
☐ Suspension and axle components (front and rear) - Check dust seals on ball joints and tie rod ends; check for excessive play
☐ Tires - Check condition and tire tread wear; Check and record the tread depth.
☐ Tires - Check tire inflation pressure and adjust if necessary
☐ Tire repair kit (if equipped) - Check and record the completeness and expiration date
☐ Underbody - Check for damage and leaks, check the wheel well liners, underbody paneling and all lines are properly mounted (including visible HV components)
☐ Warning triangle and first aid kit (if equipped) - Check if present



Labor Item	
☐	Windshield washer and headlight washing system - Add fluid if necessary; Check adjustment and function
☐	Wiper blades - Check condition and replace if necessary
☐	See ⇒ Additional Maintenance Items

1.4.3 Additional Maintenance Items

Labor Item	Interval
☐ Brake fluid - Change	Every 2 years regardless of mileage
☐ Dust and pollen filter - Replace	Every 30,000 km or 2 years, whichever occurs first
☐ Fragrance cartridges - Change (if equipped)	Every 2 years regardless of mileage
☐ Panorama sunroof systems (PSD): check drainage system by fluid check (If equipped)	Every 30,000 km or 2 years, whichever occurs first
☐ Rear axle drive - Replace coolant cartridge (with cover removed) (If equipped)	Every 30,000 km or 2 years, whichever occurs first



© 05.2024 Audi of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Audi of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.