



2017 Audi Service

1 Maintenance Schedules (USA and Canada)

⇒ MY 2017 Maintenance Schedule (Gas and Hybrid Vehicles) - United States

⇒ MY 2017 Maintenance Schedule (Gas and Hybrid Vehicles) - Canada

1.1 MY 2017 Maintenance Schedule (Gas and Hybrid Vehicles) - United States

Note

The intervals shown in this table are based on vehicles operating under normal conditions. In case of severe conditions, such as extremely low temperatures, excessive dust, etc., it is necessary for certain operations to be carried out in between the given intervals. This applies particularly to engine oil changes and the cleaning or replacing of the air cleaner filter element.

Service Intervals in Miles	10K	20K	30K	40K	50K	60K	70K	80K
⇒ Minor Maintenance ¹⁾	X		X		X		X	
⇒ Standard Maintenance ²⁾		X		X		X		X
⇒ Additional Maintenance Items								

¹⁾ First minor maintenance service at 10,000 miles or 1 year after delivery, whichever occurs first. Minor maintenance services thereafter occur at intervals of 20,000 miles or every 2 years after the last minor maintenance service, whichever occurs first.

²⁾ First standard maintenance service at 20,000 miles or 2 years after delivery, whichever occurs first. Standard maintenance services thereafter occur at intervals of 20,000 miles or every 2 years after the last standard maintenance service, whichever occurs first.

✓ all completed items

1.1.1 Minor Maintenance

Labor Item	Vehicle Application
☐ AdBlue® Fluid - Fill completely with fresh fluid and adapt learned values for AdBlue tank under guided fault finding after filling fluid	Only TDI models
☐ Brake System - Check for damage and leaks, thickness of pads, and brake fluid level. Check that the vent caps are mounted on calipers and check the condition of the brake hoses.	All Vehicles
☐ Cooling System for Electrical Components - Check coolant level according to description in ElsaPro	Only A3 e-tron®
☐ Engine Compartment - Check for leaks	All Vehicles
☐ Engine Oil & Oil Filter - Change oil and replace filter	All Vehicles
☐ On-board diagnosis - Check	Flex fuel vehicles only



Labor Item	Vehicle Application
☐ Service Reminder indicator display - Reset display	All Vehicles
☐ Tire and Spare Wheel - Check for wear and damage. Check tire pressure. Reset Tire Pressure Monitoring System (TPMS)	All Vehicles
☐ Water Separator in Fuel Filter: Remove water	Only A3 TDI and Q7 TDI
☐ Windshield Washer and Headlight Washing System - Add fluid if necessary. Check adjustment and function	All Vehicles
☐ Wiper Blades - Check condition and replace if necessary	All Vehicles
☐ See ⇒ Additional Maintenance Items	All Vehicles

1.1.2 Standard Maintenance

Labor Item	Vehicle Application
☐ Automatic Transmission and Final Drive - Check for leaks	All Vehicles
☐ Battery - 12 volt (small) side battery located in the trunk compartment on left side. Check for clean terminals (no corrosion), properly mounted housing and no damage; replace if necessary	Only Q5 hybrid
☐ Battery - Check for clean terminals (no corrosion), properly mounted housing and no damage; replace if necessary. Also, check the acid level of battery only if the level can be seen through the housing and fill if necessary	All except Q5 hybrid
☐ Connected Box Battery-Check state of health with Vehicle Diagnostic Tester in Guided functions	A4, S4, A4 allroad, Q7
☐ Charging Socket - Check for damage and make sure the socket is dry	Only A3 e-tron®
☐ Crash Active Headrest - Check function	Only A8
☐ Convertible Top Latch – Lubricate	Only A5 Cabriolet and S5 Cabriolet
☐ Convertible Top - Check cloth top function and rollover protection with cloth top down	Only A5 Cabriolet and S5 Cabriolet
☐ Cooling System - Check coolant level, add coolant if necessary, and check protection to spec -25°C	All except A3 e-tron®
☐ Doors - Lubricate straps, locks (all), and hood latch	Only R8
☐ Drive Shafts - Check boots	All Vehicles
☐ Dust and Pollen Filter - Replace filter	All Vehicles
☐ Exhaust system - Check for damage and leaks	All Vehicles
☐ Exterior Lighting - Check front and rear lights, turn signals, cornering lights, reverse lights, license plate lights, and hazard warning lights	All Vehicles
☐ Front and Rear Axle/Suspension Components - Check dust seals on ball joints and tie rod ends; check for excessive play	All Vehicles
☐ Fuel Tank Flap System - Check the water drain	Only R8, R8 Spyder



Labor Item	Vehicle Application
☐ Headlights - Check adjustment	All Vehicles
☐ Hood Safety Catch – Lubricate	All except A4, Q7, and TT with integrated catch
☐ Horn - Check function	All Vehicles
☐ Instrument Cluster - Check warning and indicator lights	All Vehicles
☐ Interior Lights - Check all interior lights, trunk lights and glove box compartment illumination	All Vehicles
☐ Manual Transmission and Final Drive - Check for leaks	All Vehicles
☐ On-board Tool Kit- Check for completeness	All Vehicles
☐ Panoramic Sunroof Systems - Clean guide rails and lubricate with grease according to description in ElsaPro (if equipped)	Only A8, Q5, and Q7
☐ Plenum Chamber and Water Drain Valves - Check for dirt. NOTE: Time spent cleaning of item is a separate charge for service time	All models except A3, A4, Q3, R8, and TT
☐ Road Test - Check engine performance, clutch, manual/auto transmission, braking (including hand and foot brake), steering, wheels, wheel bearings, drive shaft, horn, hybrid vehicles (electric drive for operational readiness)	All Vehicles
☐ Safety Belts- Check clip for belt tongue and check function of all safety belts	All Vehicles
☐ Stone Chip Protection - Check on the rear axle/control arm for secure fit and for damage	All Vehicles
☐ Spoiler - Lubricate according to description in ElsaPro	Only A7, S7, RS7, and TT
☐ Snow Screen for Air Cleaner - Clean	Only A4, allroad®, S4, A5, S5, RS 5, Q5, SQ5, and Q5 hybrid
☐ Sunroof Systems - Check function (if equipped)	All Vehicles
☐ Tire Repair Set - Check for completeness and renewal date (where applicable)	All Vehicles
☐ Underbody (Including Front and Rear Closeout Panels) - Check for damage and leaks	All Vehicles
☐ Visual Check - Check the chassis for possible paint damage and corrosion, from the inside and outside with the doors as well as hood and trunk lids open	All Vehicles
☐ Visual Check - Check that the wheel house liners, underbody panelling and lines are correctly mounted	All Vehicles
☐ See ⇒ Additional Maintenance Items	All Vehicles



1.1.3 Additional Maintenance Items

Labor Item	Interval	Vehicle Application
☐ AdBlue® Fluid - Replace only if AdBlue® has not been filled within the last 4 years	Every 4 years regardless of mileage	Only all TDI models
☐ Air Filter - Replace and clean housing	Every 40,000 miles	Only RS7, RS7 performance, A8 TDI, A8 3.0T, A8 4.0T, and Q5 TDI (Excluding S8 4.0 TFSI)
☐ Air Filter - Replace and clean housing	Every 60,000 miles	All except RS7, RS7 performance, A8 TDI, A8 3.0T, A8 4.0T, and Q5 TDI
☐ AWD Clutch - Change fluid (if equipped)	Every 3 years	A3 with AWD, S3, RS 3, Q3 with AWD TT, TTS
☐ Brake Discs - Check thickness	Every 40,000 miles or 4 years, whichever occurs first	All Vehicles
☐ Brake and Clutch System, Changing Brake Fluid	Every 2 years regardless of mileage	All Vehicles
☐ Diesel Particulate Filter (DPF) – Check ash loading according to manufacturer work procedure. Replace if necessary	Every 120,000 miles or 120,000 miles after DPF replacement and every 20,000 miles thereafter	All TDI Vehicles * Note: If DPF replacement is not necessary, perform check every 20,000 miles (30,000 km) thereafter until replacement becomes necessary
☐ Front Axle Differential - Change fluid (if equipped)	Every 120,000 miles or 10 years, whichever occurs first	Only R8
☐ Fuel filter- Replace	Every 20,000 miles and thereafter every 20,000 miles	All TDI models
☐ Panoramic sunroof systems (PSD) - Check drainage system by fluid check according to Elsa (if equipped)	Every 20,000 miles or 2 years, whichever occurs first	All Vehicles with 3FU PR-Code
☐ Rear Axle, quattro® Sport - Change ATF oil for clutch hydraulics and differential oil	Every 40,000 miles	Only RS7, RS7 performance
☐ Ribbed V-belt (Compressor Front Drive Belt Only) - Replace	Every 60,000 miles	All vehicles with the 3.0L V6 TFSI
Ribbed V-belt - Check and replace if necessary. Check tension of belt drive with a manual tensioner and retention if necessary.	Every 80,000 miles	All Vehicles
☐ Spark Plugs - Replace	Every 30,000 miles or 3 years, whichever occurs first	Only RS 3



Labor Item	Interval	Vehicle Application
☐ Spark Plugs - Replace	Every 30,000 miles or 6 years, whichever occurs first	Only 2.0L TFSI Flex Fuel engine, RS7 performance, and S8 plus
☐ Spark Plugs - Replace	Every 40,000 miles or 6 years, whichever occurs first	Only A3 e-tron®, 4.0L V8, A8L W12, RS7, and all 2.0L TFSI *Excludes: Q3, S8 plus, RS7 performance, and all 2.0L TFSI Flex Fuel engines
☐ Spark Plugs - Replace	Every 60,000 miles or 6 years, whichever occurs first	Only A3 1.8T, 3.0 L V6 TFSI, Q3 2.0T, SQ5, and 5.2L V10
☐ S tronic Transmission - Change fluid	Every 40,000 miles	Only A3 e-tron®, TTRS, RS 3, A4 2.0T, A4 all-road®, Q5 2.0T, and A6 2.0T FWD
☐ S tronic Transmission - Change fluid and filter element for clutch hydraulics	Every 40,000 miles	Only A3 Sedan and Cabriolet Non B Cycle 2.0T, S3, TT, TTS, S5, S6, S7 4.0T, and R8 (4S)
☐ S tronic Transmission - Change fluid	Every 80,000 miles	Only A3 Sedan 2.0T B-cycle, A3 Cabriolet 2.0T B-cycle
☐ Timing Belt - Replace (Check condition of timing belt tensioning system, dampening pulleys, and idler pulleys and replace if necessary)	Every 130,000 miles	Only 2.0L TDI models and A3 e-tron®
☐ Tiptronic Gear Box - Change ATF	Every 60,000 miles	Only Q5 Hybrid

1.2 MY 2017 Maintenance Schedule (Gas and Hybrid Vehicles) - Canada

Note

The intervals shown in this table are based on vehicles operating under normal conditions. In case of severe conditions, such as extremely low temperatures, excessive dust, etc., it is necessary for certain operations to be carried out in between the given intervals. This applies particularly to engine oil changes and the cleaning or replacing of the air cleaner filter element.

Service Intervals in Kilometers	15K	30K	45K	60K	75K	90K	105 K	120 K
⇒ Minor Maintenance ¹⁾	X		X		X		X	
⇒ Standard Maintenance ²⁾		X		X		X		X
⇒ Additional Maintenance Items								

¹⁾ First minor maintenance service at 15,000 km or 1 year after delivery, whichever occurs first. Minor maintenance services thereafter occur at intervals of 30,000 km or every 2 years after the last minor maintenance service, whichever occurs first.

²⁾ First standard maintenance service at 30,000 km or 2 years after delivery, whichever occurs first. Standard maintenance services thereafter occur at intervals of 30,000 km or every 2 years after the last standard maintenance service, whichever occurs first.



✓ all completed items

1.2.1 Minor Maintenance

Labor Item	Vehicle Application
☐ AdBlue® Fluid - Fill completely with fresh fluid and adapt learned values for AdBlue tank under guided fault finding after filling fluid	Only all TDI models
☐ Brake System - Check for damage and leaks, thickness of pads, and brake fluid level. Check that the vent caps are mounted on calipers and check the condition of the brake hoses.	All Vehicles
☐ Cooling System for Electrical Components - Check coolant level according to description in ElsaPro	Only A3 e-tron®
☐ Engine Compartment - Check for leaks	All Vehicles
☐ Engine Oil & Oil Filter - Change oil and replace filter	All Vehicles
☐ On-board diagnosis - Check	Flex fuel vehicles only
☐ Service Reminder indicator display - Reset display	All Vehicles
☐ Tire and Spare Wheel - Check for wear and damage. Check tire pressure. Reset Tire Pressure Monitoring System (TPMS)	All Vehicles
☐ Water Separator in Fuel Filter: Remove water	Only A3 TDI and Q7 TDI
☐ Windshield Washer and Headlight Washing System - Add fluid if necessary. Check adjustment and function	All Vehicles
☐ Wiper Blades - Check condition and replace if necessary	All Vehicles
☐ See ⇒ Additional Maintenance Items	All Vehicles

1.2.2 Standard Maintenance

Labor Item	Vehicle Application
☐ Automatic Transmission and Final Drive - Check for leaks	All Vehicles
☐ Battery - 12 volt (small) side battery located in the trunk compartment on left side. Check for clean terminals (no corrosion), properly mounted housing and no damage; replace if necessary	Only Q5 hybrid
☐ Battery - Check for clean terminals (no corrosion), properly mounted housing and no damage; replace if necessary. Also, check the acid level of battery only if the level can be seen through the housing and fill if necessary	All except Q5 hybrid
☐ Connected Box Battery-Check state of health with Vehicle Diagnostic Tester in Guided functions	A4, S4, A4 allroad, Q7
☐ Charging Socket - Check for damage and make sure the socket is dry	Only A3 e-tron®
☐ Crash Active Headrest - Check function	Only A8



Labor Item	Vehicle Application
☐ Convertible Top Latch – Lubricate	Only A5 Cabriolet and S5 Cabriolet
☐ Convertible Top - Check cloth top function and rollover protection with cloth top down	Only A5 Cabriolet and S5 Cabriolet
☐ Cooling System - Check coolant level, add coolant if necessary, and check protection to spec -25°C	All except A3 e-tron®
☐ Doors - Lubricate straps, locks (all), and hood latch	Only R8
☐ Drive Shafts - Check boots	All Vehicles
☐ Dust and Pollen Filter - Replace filter	All Vehicles
☐ Exhaust system - Check for damage and leaks	All Vehicles
☐ Exterior Lighting - Check front and rear lights, turn signals, cornering lights, reverse lights, license plate lights, and hazard warning lights	All Vehicles
☐ Front and Rear Axle/Suspension Components - Check dust seals on ball joints and tie rod ends; check for excessive play	All Vehicles
☐ Fuel Tank Flap System - Check the water drain	Only R8, R8 Spyder
☐ Headlights - Check adjustment	All Vehicles
☐ Hood Safety Catch – Lubricate	All except A4, Q7, and TT with integrated catch
☐ Horn - Check function	All Vehicles
☐ Instrument Cluster - Check warning and indicator lights	All Vehicles
☐ Interior Lights - Check all interior lights, trunk lights and glove box compartment illumination	All Vehicles
☐ Manual Transmission and Final Drive - Check for leaks	All Vehicles
☐ On-board Tool Kit- Check for completeness	All Vehicles
☐ Panoramic Sunroof Systems - Clean guide rails and lubricate with grease according to description in ElsaPro (if equipped)	Only A8, Q5, and Q7
☐ Plenum Chamber and Water Drain Valves - Check for dirt. NOTE: Time spent cleaning of item is a separate charge for service time	All models except A3, A4, Q3, R8, and TT
☐ Road Test - Check engine performance, clutch, manual/auto transmission, braking (including hand and foot brake), steering, wheels, wheel bearings, drive shaft, horn, hybrid vehicles (electric drive for operational readiness)	All Vehicles
☐ Safety Belts- Check clip for belt tongue and check function of all safety belts	All Vehicles
☐ Stone Chip Protection - Check on the rear axle/control arm for secure fit and for damage	All Vehicles
☐ Spoiler - Lubricate according to description in ElsaPro	Only A7, S7, RS7, and TT
☐ Snow Screen for Air Cleaner - Clean	Only A4, allroad®, S4, A5, S5, RS 5, Q5, SQ5, and Q5 hybrid
☐ Sunroof Systems - Check function (if equipped)	All Vehicles



Labor Item	Vehicle Application
☐ Tire Repair Set - Check for completeness and renewal date (where applicable)	All Vehicles
☐ Underbody (Including Front and Rear Closeout Panels) - Check for damage and leaks	All Vehicles
☐ Visual Check - Check the chassis for possible paint damage and corrosion, from the inside and outside with the doors as well as hood and trunk lids open	All Vehicles
☐ Visual Check - Check that the wheel house liners, underbody panelling and lines are correctly mounted	All Vehicles
☐ See ⇒ Additional Maintenance Items	All Vehicles

1.2.3 Additional Maintenance Items

Labor Item	Interval	Vehicle Application
☐ AdBlue® Fluid - Replace only if AdBlue® has not been filled within the last 4 years	Every 4 years regardless of mileage	Only all TDI models
☐ Air Filter - Replace and clean housing	Every 60,000 km	Only RS7, RS7 performance, A8 TDI, A8 3.0T, A8 4.0T, and Q5 TDI (Excluding S8 4.0 TFSI)
☐ Air Filter - Replace and clean housing	Every 90,000 km	All except RS7, RS7 performance, A8 TDI, A8 3.0T, A8 4.0T, and Q5 TDI
☐ AWD Clutch - Change fluid (if equipped)	Every 3 years	A3 with AWD, S3, RS 3, Q3 with AWD TT, TTS
☐ Brake Discs - Check thickness	Every 60,000 km or 4 years, whichever occurs first	All Vehicles
☐ Brake and Clutch System, Changing Brake Fluid	Every 2 years regardless of mileage	All Vehicles
☐ Diesel Particulate Filter (DPF) – Check ash loading according to manufacturer work procedure. Replace if necessary	Every 180,000 km or 180,000 km after DPF replacement and every 30,000 km thereafter	All TDI Vehicles * Note: If DPF replacement is not necessary, perform check every 20,000 miles (30,000 km) thereafter until replacement becomes necessary
☐ Front Axle Differential - Change fluid (if equipped)	Every 180,000 km or 10 years, whichever occurs first	Only R8
☐ Fuel filter- Replace	Every 30,000 km and thereafter every 30,000 km	All TDI models
☐ Panoramic sunroof systems (PSD) - Check drainage system by fluid check according to Elsa (if equipped)	Every 20,000 miles or 2 years, whichever occurs first	All Vehicles with 3FU PR-Code
☐ Rear Axle, quattro® Sport - Change ATF oil for clutch hydraulics and differential oil	Every 60,000 km	Only RS7, RS7 performance



Labor Item	Interval	Vehicle Application
☐ Ribbed V-belt (Compressor Front Drive Belt Only) - Replace	Every 90,000 km	All vehicles with the 3.0L V6 TFSI
Ribbed V-belt - Check and replace if necessary. Check tension of belt drive with a manual tensioner and retention if necessary.	Every 120,000 km	All Vehicles
☐ Spark Plugs - Replace	Every 45,000 km or 3 years, whichever occurs first	Only RS 3
☐ Spark Plugs - Replace	Every 45,000 km or 6 years, whichever occurs first	Only 2.0L TFSI Flex Fuel engine, RS7 performance, and S8 plus
☐ Spark Plugs - Replace	Every 60,000 km or 6 years, whichever occurs first	Only A3 e-tron®, 4.0L V8, A8L W12, RS7, and all 2.0L TFSI *Excludes: Q3, S8 plus, RS7 performance, and all 2.0L TFSI Flex Fuel engines
☐ Spark Plugs - Replace	Every 90,000 km or 6 years, whichever occurs first	Only A3 1.8T, 3.0 L V6 TFSI, Q3 2.0T, SQ5, and 5.2L V10
☐ S tronic Transmission - Change fluid	Every 60,000 km	Only A3 e-tron®, TTRS, RS 3, A4 2.0T, A4 all-road®, Q5 2.0T, and A6 2.0T FWD
☐ S tronic Transmission - Change fluid and filter element for clutch hydraulics	Every 60,000 km	Only A3 Sedan and Cabriolet Non B Cycle 2.0T, S3, TT, TTS, S5, S6, S7 4.0T, and R8 (4S)
☐ S tronic Transmission - Change fluid	Every 120,000 km	Only A3 Sedan 2.0T B-cycle, A3 Cabriolet 2.0T B-cycle
☐ Timing Belt - Replace (Check condition of timing belt tensioning system, dampening pulleys, and idler pulleys and replace if necessary)	Every 205,000 km	Only 2.0L TDI models and A3 e-tron®
☐ Tiptronic Gear Box - Change ATF	Every 90,000 km	Only Q5 Hybrid



© 04.2026 Audi of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Audi of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.