

2010 VW Service

1 Table of Contents

USA5R503621 – 11/24/2025

⇒ [Maintenance Schedules](#)

2 Maintenance Schedules

⇒ [Maintenance Schedule \(Except Routan\)](#)

⇒ [Maintenance Schedule \(Routan Only\)](#)

2.1 Maintenance Schedule (Except Routan)

Note

The intervals shown in this table are based on vehicles operating under normal conditions. In case of severe conditions, such as extremely low temperatures, excessive dust, etc., it is necessary for certain operations to be carried out in between the given intervals. This applies particularly to engine oil changes, Drivetrain fluid service, and the cleaning or replacing of the air cleaner filter element.

Service Intervals										
— Miles	10K	20K	30K	40K	50K	60K	70K	80K	90K	100K
— Kilometers	15K	30K	45K	60K	75K	90K	105K	120K	135K	150K
⇒ Minor Maintenance ¹⁾	X		X		X		X		X	
⇒ Standard Maintenance ²⁾		X		X		X		X		X
⇒ Extended Maintenance				X				X		
⇒ Additional Maintenance Items										
¹⁾ First minor maintenance service at 10,000 miles (15,000 km) or 1 year after delivery, whichever occurs first. Minor maintenance services thereafter occur at intervals of 20,000 miles (30,000 km) or every 2 years after the last minor maintenance service, whichever occurs first.										
²⁾ Standard maintenance services occur at intervals of 20,000 miles (30,000 km) or every 2 years, whichever occurs first.										
³⁾ Extended maintenance services occur at intervals of 40,000 miles (65,000 km). Only applies in combination with Standard Maintenance.										

✓ all completed items

2.1.1 Minor Maintenance

Service Item	Applicability
<input type="checkbox"/> Engine Oil, Change and Replace Oil Filter	All Vehicles
<input type="checkbox"/> Front and Rear Brake Pad Thickness and Brake Rotor Condition, Check	All Vehicles
<input type="checkbox"/> Service Interval Display, Reset	All Vehicles

Service Item	Applicability
<input type="checkbox"/> Tires – Rotate front to rear	All Vehicles
<input type="checkbox"/> High-Voltage Battery, Charge	PHEV
<input type="checkbox"/> Warning Label, Checking Presence	PHEV
<input type="checkbox"/> Reducing Agent (AdBlue), Filling; Only at Customer Request	Diesel
<input type="checkbox"/> See → Additional Maintenance Items	All Vehicles

2.1.2 Standard Maintenance

Service Item	Applicability
<input type="checkbox"/> Perform Minor Maintenance	All Vehicles
<input type="checkbox"/> Automatic Headlamp Control, Check Function	All Vehicles
<input type="checkbox"/> Battery and Auxiliary Battery, Check with Battery Tester if Necessary	All Vehicles
<input type="checkbox"/> Brake Fluid Level, Check Depending on Brake Pad Wear	All Vehicles
<input type="checkbox"/> Brake System and Shock Absorbers, Inspect for Leaks and Damage.	All Vehicles
<input type="checkbox"/> Charging Cable, Check Presence and Condition	BEV and PHEV
<input type="checkbox"/> Cooling System, Check Freeze Protection and Coolant Level	All Vehicles
<input type="checkbox"/> Cooling system for high-voltage system, Check, as well as check the presence and wear of the seal for the coolant expansion tank.	PHEV, BEV
<input type="checkbox"/> CSC Roof, Check for Damage and Check Function, Clean Wind Deflector and Seals and Apply Special Lubricant to Rubber Seals.	EOS
<input type="checkbox"/> Engine and Components in Engine Compartment (from Below), Inspect for Leaks and Damage	All Vehicles
<input type="checkbox"/> Engine and Engine Compartment Components (from Above), Inspect for Leaks and Damage	All Vehicles
<input type="checkbox"/> Engine Oil Level, Check	All Vehicles
<input type="checkbox"/> Front and Rear Brake Pad Thickness and Brake Rotor Condition, Check	All Vehicles
<input type="checkbox"/> Front Lighting, Check Function	All Vehicles
<input type="checkbox"/> Headlamp Washer System, Check Function	All Vehicles
<input type="checkbox"/> Headlamps, Check and Adjust if Necessary	All Vehicles
<input type="checkbox"/> High-Voltage Charging Socket in Radiator Grille, Inspect for Contamination and Damage	PHEV
<input type="checkbox"/> Horn, Check Function	All Vehicles
<input type="checkbox"/> Hybrid Components, Visually Inspecting for Damage of the High-Volt. Components and Wires.	HEV, PHEV
<input type="checkbox"/> Rear Lamps, Check Function	All Vehicles
<input type="checkbox"/> Removable Trailer Hitch, Check (if equipped).	All Applicable Vehicles
<input type="checkbox"/> Road Test, Perform	All Vehicles
<input type="checkbox"/> Service Interval Display, Reset	All Vehicles
<input type="checkbox"/> Stationary Cornering Lamp, Check Function	All Vehicles
<input type="checkbox"/> Tire Pressure Monitoring System, Calibrating to Tire Pressure Adjustment	All Applicable Vehicles

Service Item	Applicability
<input type="checkbox"/> Tire Pressure, Check	All Vehicles
<input type="checkbox"/> Tires – Rotate front to rear	All Vehicles
<input type="checkbox"/> Tire Repair Kit, Check for Damage and Use	All Applicable Vehicles
<input type="checkbox"/> Tires, Check Condition and Wear Pattern. Tread Depth, Enter	All Vehicles
<input type="checkbox"/> Torque splitter: Read out oil deterioration using the Vehicle Diagnostic Tester (if equipped)	All Applicable Vehicles
<input type="checkbox"/> Transmission, Final Drive and CV Boots, Check for Leaks and Damage	All Vehicles
<input type="checkbox"/> Windshield Wiper/Washer System, Check Freeze Protection and Filling Fluid	All Vehicles
<input type="checkbox"/> Windshield Wiper/Washer System, Check Function and for Damage, Adjust if Necessary	All Vehicles
<input type="checkbox"/> Wiper Blades, Check for Damage and Check Park Position	All Vehicles
<input type="checkbox"/> See ⇒ Additional Maintenance Items	All Vehicles

2.1.3 Extended Maintenance

Service Item	Applicability
<input type="checkbox"/> Air Suspension, Check for Leaks and Damage	Touareg
<input type="checkbox"/> Ball Joints, Axle Bearings, Coupling Rod and Stabilizer Bar Bushings, Inspect for Damage	All Vehicles
<input type="checkbox"/> Body Interior and Exterior, Inspect for Corrosion	All Vehicles
<input type="checkbox"/> Convertible Top Locking Pieces, Clean and Lubricate	Golf & Beetle Convertible
<input type="checkbox"/> Convertible Top, Performing Leak Test	Golf & Beetle Convertible
<input type="checkbox"/> Door Arrester, Lubricate	EOS, Golf Cabriolet, CC
<input type="checkbox"/> Exhaust System, Inspect for Leaks, Attachment and Damage	All Vehicles
<input type="checkbox"/> Front and Rear Coil Springs and Stop Buffers, Inspect for Damage	All Vehicles
<input type="checkbox"/> Hood Hook, Lubricate	CC, Golf Convertible EOS Golf(5K), Tiguan(5N) Touareg (7P)
<input type="checkbox"/> Interior Lamps in Headliner, Luggage Compartment and Glove Compartment Lamps, Check Function	All Vehicles
<input type="checkbox"/> Power Steering, Check Fluid Level	Touareg
<input type="checkbox"/> Ribbed Belt, Check Condition	All Vehicles
<input type="checkbox"/> Sliding Sunroof, Perform noise and Function Test	All Applicable Vehicles
<input type="checkbox"/> Underbody, Inspect Underbody Protection, Trim Panels, Wire Routing and Plugs for Damage	All Vehicles

Service Item	Applicability
<input type="checkbox"/> Windshield, Inspect for Damage	All Vehicles
<input type="checkbox"/> See ⇒ Additional Maintenance Items	All Vehicles

2.1.4 Additional Maintenance Items

Service Item	Interval	Applicability
<input type="checkbox"/> Air Filter – Replace and clean screen	Every 60,000 miles (90K km), or 6 years, whichever occurs first	All Vehicles, except Golf R (5K)
	Every 40,000 miles (60K km), or 4 years, whichever occurs first	Golf R (5K)
<input type="checkbox"/> AWD Clutch – Change fluid	Every 3 years	All Applicable Vehicles
<input type="checkbox"/> Brake and Clutch System, Changing Brake Fluid	3 years aft. registration, then every 2 years –USA	All Vehicles
	2 years aft. registration, then every 2 years –Canada	
<input type="checkbox"/> Diesel Fuel Filter – Replace	Every 60,000 miles (90K km)	Passat(3C*) Beetle, Jetta, Golf
	Every 40,000 miles (60K km)	Touareg
<input type="checkbox"/> Diesel Particulate Filter – Check	Every 100,000 miles (160K km) then every 20K miles	Passat, Beetle, Jetta, Golf, Touareg
<input type="checkbox"/> Dust and Pollen Filter – Replace	Every 40,000 miles (60K km), or 2 years, whichever occurs first	All Vehicles
<input type="checkbox"/> Reducing Agent (AdBlue), Filling	Every 10,000 miles (15K km)	TDI engines
<input type="checkbox"/> Rear Axle Differential with Torque Vectoring – Change fluid	Every 40,000 miles (60K km), or 4 years, whichever occurs first	Golf R
<input type="checkbox"/> Front Axle Differential Lock – Change fluid	Every 3 years	All Applicable Vehicles
<input type="checkbox"/> Sunroof (Panoramic) – Check function, clean and lubricate	Every 40,000 miles (60K km), or 3 years, whichever occurs first	All Applicable Vehicles
<input type="checkbox"/> Sunroof Drains – Check for blockage, clean if necessary	Every 40,000 miles (60K km)	CC, Passat (3C*) Tiguan(5N),
		Golf/Golf R(5K),

Service Item	Interval	Applicability
<input type="checkbox"/> Spark Plugs – Replace	Every 40,000 miles (60K km), or 4 years, whichever occurs first	Golf (9B), Golf R Passat, Golf (2.5l) Beetle (2.5l) Jetta (1k2 – Except CCTA/ CBFA/BPY Jetta Wag.(AJ5 – Except CCTA/ CBFA)
	Every 60,000 miles (90K km), or 6 years, whichever occurs first	Touareg, EOS Tiguan (5N) Beetle (1C / 1Y) Golf / GTI (5K–2.0T) Jetta (1k2 – CCTA/CBFA/BPY Jetta Wag.(AJ5 – CCTA/CBFA)
<input type="checkbox"/> Snow Screen for Fresh Air Blower – Replace Canada only	Every 40,000 miles (60K km), or 2 years, whichever occurs first	Golf (5K) Tiguan (5N)
<input type="checkbox"/> Transmission, Automatic – Change Fluid & filter (if applicable) »for non-DSG – USA Only«	Every 80,000 miles (120K km)	09G: Golf(5K1) 09M: Tiguan, Passat 09P: Arteon, Atlas, Tiguan 09S: Jetta, Taos 0C8: Touareg 0GC (DSG): Beetle, Golf, GTI, Golf R
	Every 40,000 miles (60K km)	01M: Jetta, Golf 02E (DSG): EOS, Jetta, Golf, Beetle, Passat 09G: Jetta(9M/1K2), Golf Variant (AJ5), Beetle 0D9 (DSG): Golf, Golf R, Golf Variant 0DD (DSG): Golf (5K1)
<input type="checkbox"/> Ribbed Belt (A/C compressor) – Replace	Every 60,000 miles (90K km)	Touareg (7L)

Service Item	Interval	Applicability
<input type="checkbox"/> Ribbed belt starter generator and tensioning roller – replace	Every 110,000 miles (180K km)	All applicable engines
<input type="checkbox"/> Toothed Belt, Camshaft Drive Tensioning Roller (Gas Engine) – Replace	Every 100,000 miles (160K km)	2.0L FSI : EOS, Jetta(162,1K2) Golf Variant (1K5,AJ5),Golf(5K)
<input type="checkbox"/> Toothed Belt, Camshaft Drive Tensioning Roller (Gas Engine) – Check	At 60,000 miles (90K km) then every 20K miles	Beetle , Passat(3C). CC, Tiguan(5N), Jetta (1K2), Jetta Sportwagon (AJ5), Golf(5K1)
	At 150,000 miles (240K km) then every 20K	Hybrid
<input type="checkbox"/> Toothed Belt and Camshaft Drive Tensioning Roller (Diesel Engine) – Replace	Every 80,000 miles (120K km)	Jetta(1K2), Golf Variant (AJ5) up to 2006
	Every 100,000 miles (160K km)	Jetta(1K2), Golf Variant (AJ5) from 2007–09
	Every 130,000 miles (210K km)	Jetta/Variant (from 2010), Golf(5K up to 2009)
	Every 220,000 miles (350K km)	Golf(5K1) from 2009
<input type="checkbox"/> Coolant Pump Toothed Belt – Check	Every 180,000 miles (300K km), or 15 years	Engines W/ toothed belts, except hybrid, Beetle (5C), Golf (5K), EOS (1F), Tiguan (5N), Touareg (7L)
	Every 150,000 miles (240K km) then every 20K miles	Jetta (1K2) and hybrid
<input type="checkbox"/> Tire Filler Bottle in tire mobility set – Replace	Every 4 years regardless of mileage driven	All applicable vehicles

2.2 Maintenance Schedule (Routan Only)

✓ all completed items

Every 6,000 Miles (9,600 km)	
<input type="checkbox"/>	Change oil and filter
<input type="checkbox"/>	Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on

Every 12,000 Miles (19,300 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on
- Inspect the engine air filter if using your vehicle in dusty or off-road conditions: Replace if necessary
- Replace the air conditioning filter (if equipped)
- Inspect the brake linings: Replace if necessary
- Inspect the CV Joints
- Inspect the exhaust system
- Inspect the front suspension, tie rod ends, and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play: replace if necessary

Every 18,000 Miles (29,000 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on

Every 24,000 Miles (38,600 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on
- Inspect the engine air filter if using your vehicle in dusty or off-road conditions: Replace if necessary
- Replace the air conditioning filter (if equipped)
- Inspect the brake linings: Replace if necessary
- Inspect the CV Joints
- Inspect the exhaust system
- Inspect the front suspension, tie rod ends, and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play: replace if necessary

Every 30,000 Miles (48,300 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on
- Replace the engine air cleaner filter

Every 36,000 Miles (58,000 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on
- Inspect the engine air filter if using your vehicle in dusty or off-road conditions: Replace if necessary
- Replace the air conditioning filter (if equipped)

Every 36,000 Miles (58,000 km)

- Inspect the brake linings: Replace if necessary
- Inspect the CV joints (Canada only)
- Inspect the exhaust system (Canada only)
- Inspect the front suspension, tie rod ends, and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play: replace if necessary

Every 42,000 Miles (68,000 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on

Every 48,000 Miles (77,300 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on
- Inspect the engine air filter if using your vehicle in dusty or off-road conditions: Replace if necessary
- Replace the air conditioning filter (if equipped)
- Inspect the brake linings: Replace if necessary
- Inspect the CV joints
- Inspect the exhaust system
- Inspect the front suspension, tie rod ends, and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play: replace if necessary

Every 54,000 Miles (87,000 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on

Every 60,000 Miles (96,500 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on
- Inspect the engine air filter if using your vehicle in dusty or off-road conditions: Replace if necessary (USA only)
- Replace the engine air cleaner filter (USA only)
- Replace the air conditioning filter (if equipped)
- Inspect the brake linings: Replace if necessary
- Inspect the front suspension, tie rod ends, and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play: replace if necessary

Every 60,000 Miles (96,500 km)

- Change the automatic transaxle fluid and filter if using your vehicle for any of the following: Police, taxi, fleet or frequent trailer towing
- Flush and replace the engine coolant (USA only)

Every 66,000 Miles (106,200 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on

Every 72,000 Miles (116,000 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on
- Inspect the engine air filter if using your vehicle in dusty or off-road conditions: Replace if necessary
- Replace the air conditioning filter (if equipped)
- Inspect the brake linings: Replace if necessary
- Inspect the CV joints
- Inspect the exhaust system
- Inspect the front suspension, tie rod ends, and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play: replace if necessary

Every 78,000 Miles (125,500 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on

Every 84,000 Miles (135,000 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on
- Inspect the engine air filter if using your vehicle in dusty or off-road conditions: Replace if necessary
- Replace the air conditioning filter (if equipped)
- Inspect the brake linings: Replace if necessary
- Inspect the front suspension, tie rod ends, and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play: replace if necessary

Every 90,000 Miles (145,000 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on

Every 90,000 Miles (145,000 km)

- Replace the engine air cleaner filter
- Inspect and replace the PCV Valve if necessary

Every 96,000 Miles (154,500 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on
- Inspect the engine air filter if using your vehicle in dusty or off-road conditions: Replace if necessary
- Replace the air conditioning filter (if equipped)
- Inspect the brake linings: Replace if necessary
- Inspect the CV joints (Canada only)
- Inspect the exhaust system (Canada only)
- Inspect the front suspension, tie rod ends, and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play: replace if necessary

Every 102,000 Miles (164,000 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on
- Flush and replace the engine coolant
- Replace the ignition wires(3.8L engine)
- Replace the spark plugs
- Replace the timing belt (4.0 L (4.2 qt) engine)

Every 108,000 Miles (174,000 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on
- Inspect the engine air filter if using your vehicle in dusty or off-road conditions: Replace if necessary
- Replace the air conditioning filter (if equipped)
- Inspect the brake linings: Replace if necessary
- Inspect the front suspension, tie rod ends, and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play: replace if necessary

Every 114,000 Miles (183,500 km)

- Change oil and filter
- Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on

Every 120,000 Miles (193,000 km)

- | |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <input type="checkbox"/> Change oil and filter |
| <input type="checkbox"/> Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on |
| <input type="checkbox"/> Inspect the engine air filter if using your vehicle in dusty or off-road conditions: Replace if necessary |
| <input type="checkbox"/> Replace the air conditioning filter (if equipped) |
| <input type="checkbox"/> Inspect the brake linings: Replace if necessary |
| <input type="checkbox"/> Inspect the CV Joints |
| <input type="checkbox"/> Inspect the exhaust system |
| <input type="checkbox"/> Inspect the front suspension, tie rod ends, and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play: replace if necessary |
| <input type="checkbox"/> Change the automatic transaxle fluid and filter |
| <input type="checkbox"/> Replace accessory drive belt (s) |

© 11.2025 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.